

How your Radio Works: CDM 1250 Mobile Radios.



P1: Scan ON/OFF

P2: Go to SAR TAC Channel

P3: Enter

P4: Zone

These radios are now set up to have “Zones”. A Zone is simply a group of channels. These radios have both the east and west zone rolled into one called “Sanders County”. The reason for this is to reduce the number of things to do while mobile.

How to change Zones:

Press the **P4** button. The screen will show the name of the zone you are in. (*i.e. sanders county or mineral county.*)

Use the **UP** or **Down** arrows to change to the new zone you want to be in.

Press the **Enter** button (*This is the button in the upper right corner*)

Wait 5 sec and you can now use the channel selector to change to what channel you need in the new zone.

Zones:

Sanders County Zone: This is a combination of the East and West Zone in the handhelds.

Mineral: This contains the frequencies and names for working in Mineral County on a Mutual Aid.

Lake: This contains the frequencies and names for working in Lake County on a Mutual Aid.

Lincoln: This contains the frequencies and names for working in Lincoln County on a Mutual Aid.

Flathead: This contains the frequencies and names for working in Flathead County on a Mutual Aid.

Idaho: This contains the frequencies and names for working in Shoshone and Bonner County ID on a Mutual Aid.

Radio Safety: *These are 50 watt radios. This is enough to cause some injuries if a person is touching the antenna while transmitting. Please make sure that no one / nothing is touching the antenna while using the radio. Also try to keep your distance from the antenna, and do not place the GPS units on the roof of a vehicle.*