

How your Radio Works: HT1250 or Pro 7150 Handheld.

Orange Button: (On Top) **Scan ON/OFF.**

SIDE BUTTONS

Top: **Monitor / Squelch**

Middle: **Scan ON/OFF** Same as orange...

Bottom: **Nothing.**



A word about Battery Life:

If your radio has the new batteries, you can charge it when-ever. If it has the older ones, it is better to let it discharge all the way.

DO NOT leave the radio on the charger and turned on, as this will ruin the battery.

FRONT

P1: **Edit the Scan List**

P3: **Zone**

Enter: *Upper Right Hand Corner*

These radios are now set up to have "Zones". A Zone is simply a group of channels. On these radios you will notice the channel dial only goes 1-16. Changing zones will allow us to have more than 16 channels.

How to change Zones:

Press the **P3** button. The screen will show the name of the zone you are in. (*i.e. west zone or east zone*)

Use the **UP** or **Down** arrows to change to the new zone you want to be in.

Press the **Enter** button (*This is the button in the upper right corner*)

Wait 5 sec and you can now use the channel selector to change to what channel you need in the new zone.

Zones:

East Zone: Use this when you are east of eddy flats.

Colors: This contains all the colors channels

West Zone: Use this when west of eddy flats.

Emergency: Empty at the moment.

Mineral: This contains the frequencies and names for working in Mineral County on a Mutual Aid.

Lake: This contains the frequencies and names for working in Lake County on a Mutual Aid.

Lincoln: This contains the frequencies and names for working in Lincoln County on a Mutual Aid.

Flathead: This contains the frequencies and names for working in Flathead County on a Mutual Aid.

Idaho: This contains the frequencies and names for working in Shoshone and Bonner County ID on a Mutual Aid.